


Operation

1 Operating the air saw


- This Air Saw is designed to operate on 90 PSIG. Lower pressure (below 90 PSIG) will reduce performance of the tool. Higher air pressure (over 90 PSIG) raises the performance of the tool beyond its rated capacity and could cause serious damage to the tool and the user.

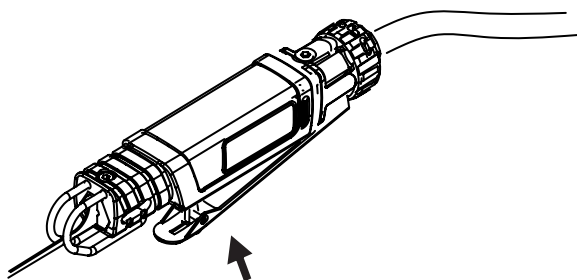

2 Installing the saw blade




WARNING: Disconnect the tool from the air supply before servicing or changing accessories.

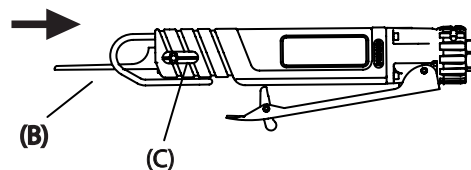

- Insert hex key (C) into set screw and rotate counter clockwise to loosen. Insert saw blade (B) into the blade holder assembly.
- Push saw blade (B) in completely until it stops. Tighten set screw with hex key (C) by turning the hex key counter clockwise. Be sure to snap down to avoid coming loose during operation.

3 Removing the saw blade

- Insert hex key (C) into set screw and rotate counter clockwise to loosen and remove saw blade (B).

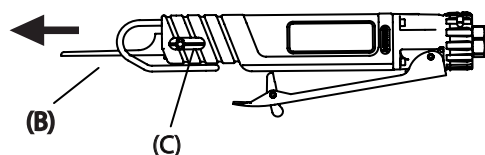

4 Cutting objects



WARNING: The blade guide must be against the object while cutting.

- Place the cutting edge of the saw guard against the work piece and then press the trigger.

